

LaunchPad for iPad or Samsung Galaxy

Assembly Instructions



LaunchPad

1



Position base plate over aluminium collar of bottom post, ensuring the two rivets (marked X) point towards the 7mm security cord slot. Insert and tighten 4 base plate screws to secure.

2

Carefully stand base and bottom post assembly upright, and slide plastic cap over post to hide the aluminium collar.

If you are not using cable management for charging, please proceed to stage 5.




3

Feed USB end of cable through top of upper post, leaving approximately 15-20cm of overhang.



4

Continue feeding USB end of cable through upper section of bottom post until it protrudes from the base, ensuring cable is kept clear of foot pads.

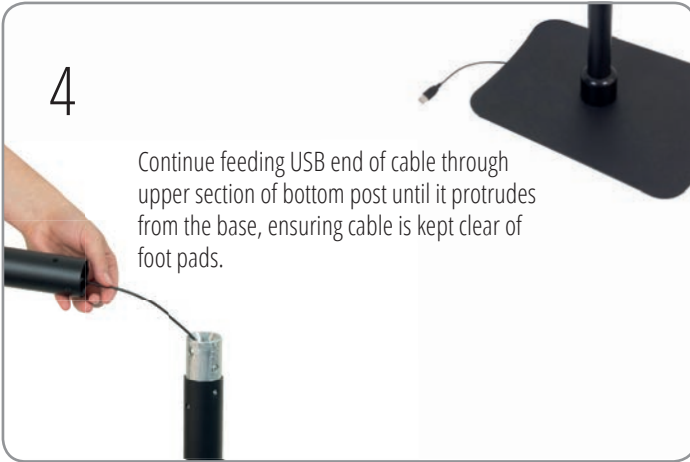

5

Carefully slide upper post over bottom post, aligning the holes to the fixing screws inside the connector.



6

Using allen key provided turn all four screws, through holes in upper post, **anticlockwise** so the heads of the screws securely engage with the inside of the post.



7

If applicable, feed cable through rear of enclosure. Align holes of enclosure with threaded inserts at the top of the post. Insert and tighten 4 screws to secure.



8

Fully remove security screw in rear of enclosure using key provided and lift fascia clear.



9

If applicable, plug charge/sync cable into tablet.

Place tablet inside enclosure ensuring it is centrally positioned within the relevant corner mouldings.



10

Replace fascia, re-insert and tighten security screw to secure.

